



 






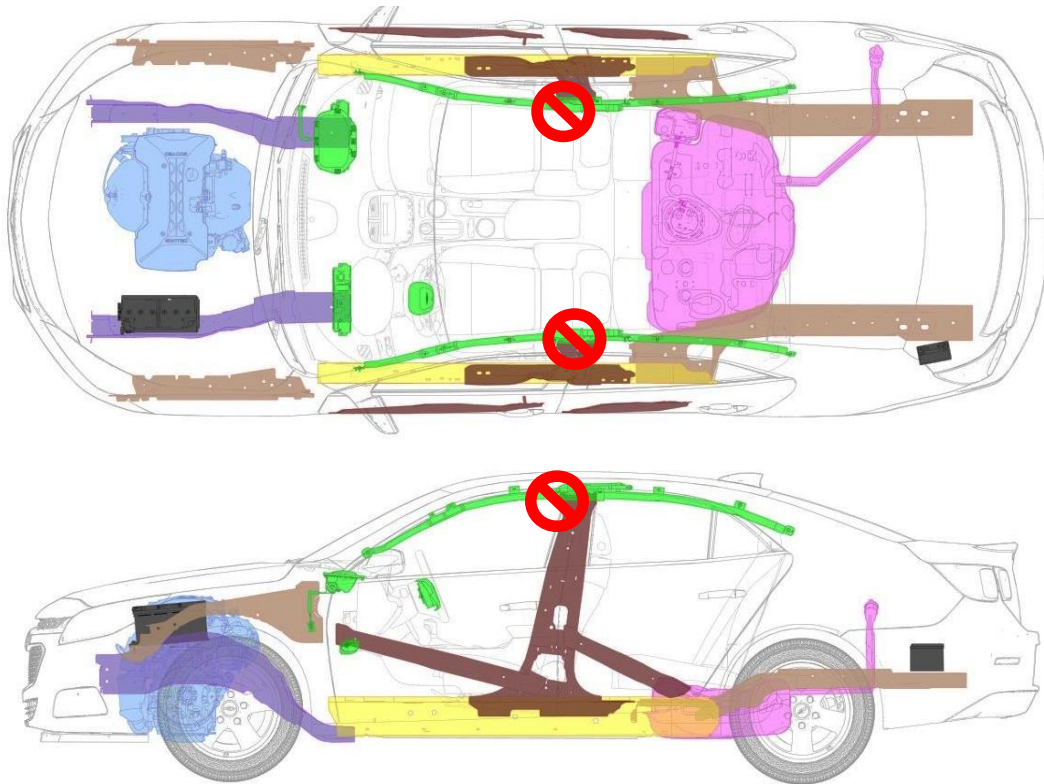

2014 Chevrolet Malibu (With Start / Stop Technology)



Legend

	Ultra High Strength Steel		Do Not Cut Zone
	Dual Phase Steel		Airbag Components
	High Strength Dual Phase Steel		Fuel Tank
	High Strength low Alloy Steel		12 Volt Battery



2014 Chevrolet Malibu (With Start / Stop Technology)

The 2014 Chevrolet Malibu with start / stop technology incorporates two 12 volt batteries that must be disconnected prior to occupant extraction.

To disable the vehicle:

1. Turn the ignition switch to "OFF".
2. Cut the black negative 12V battery cables at the starting battery under the hood and the auxiliary battery in the trunk area.

Note: After disabling 12 volt power, wait 1 minute to allow any undeployed airbag reserve energy to dissipate.

Auxiliary Battery

Starting Battery



EMERGENCY PERSONNEL:
To help avoid personal injury in an emergency,

- Turn ignition to "Off".
- Cut the black negative 12V battery cable.
- Cut the 12V auxiliary battery black negative cable in rear of the vehicle (see diagram).

SERVICE PERSONNEL:
To help avoid personal injury during vehicle service, disconnect both battery locations (see diagram).

PERSONNEL AFFECTÉ AUX URGENCES :
Pour éviter des blessures en cas d'urgence,

- Mettez le commutateur d'allumage en position « Off » (Arrêt).
- Couper le câble négatif de batterie 12V noir.
- Couper le câble négatif de batterie auxiliaire 12V noir à l'arrière du véhicule (voir schéma).

PERSONNEL D'ENTRETIEN :
Pour éviter des blessures au cours de l'entretien du véhicule déconnecter les deux emplacements de batterie (voir schéma).

PERSONAL DE EMERGENCIA :
Para evitar lesiones personales en una emergencia,

- Gire la ignición a "Off" (apagado).
- Corte el cable negativo de la batería de 12V.
- Corte el cable negativo negro de la batería auxiliar de 12V cerca del vehículo (vea el diagrama).

PERSONAL DE SERVICIO:
Para ayudar a evitar lesiones personales durante el servicio del vehículo, desconecte ambas ubicaciones de la batería (vea el diagrama).

23430790